


U.S. ARCHITECTURAL PRODUCTS, INC.
TYPICAL FASTENER LAYOUT FOR INSTALLATION OF CEMDECK FLOORS / ROOFS

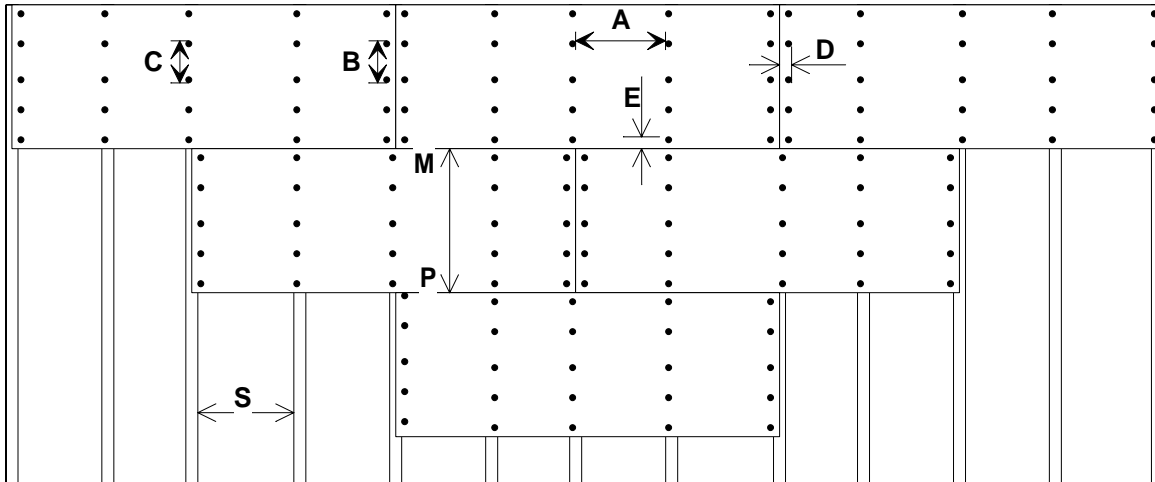

- S** = Support centers not to exceed 24 inches on centers.
- A** = 12", 16", or 24" dependent upon support spacing.
- B** = 12" on centers at panel end joints over supports
- C** = 16" on centers along supports withing field of panel.
- D** = 3/4" minimum from panel end joint edges.
- E** = 2" from panel tongue & groove side joint edge.
- M-P** = Bond all edges of sheet, both square and T&G, with adhesive to achieve bonding at sheet edges.